

FRIGOPACK FU+ AND DIXELL XWEB - USEFUL INFORMATION ON CONNECTION


Preparing the Frequency Inverter

- Please make sure that a CM-1 Communication Module is installed on the **FriGoPack FU+** inverter. If not, refer to Product Information PI_1-004-A.2 „FP FU+/12 with Module CM-1“ and install the module.
- Please make sure that the start signal on terminal X13:2 (DI1) is **not connected** before you start to work on the inverter!



Connecting XWEB and FriGoPack FU+

- There are three connection ports on the bottom of module CM-1. XC1 and XC2 are RS232 interface ports for up to two extension modules.
- XC3 is to be used for the RS485 connection of **FriGoPack FU+** and the XWEB Server.
- The small yellow slide switch on the right activates a 120 Ω terminating resistor:
Slider on the left → resistor activated
Slider on the right → resistor not activated
- Use the cable supplied by KIMO RHVAC Controls to connect the inverter (via terminal XC3) to the relevant terminals 12 (-), 13 (+) and 14 (gnd) on the XWEB server (see below).
- KIMO cable designation: Accessory MCC-6-..
Available lengths: 1,5 m / 2 m / 3 m

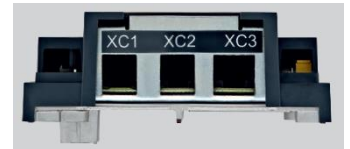

- Please make sure the three wires are connected correctly:
 - Black: Ground (gnd)
 - Yellow: Plus (+)
 - Green: Minus (-)

Please contact our applications engineers for any questions by phone or mail (applications@frigokimo.com). They will be pleased to help.