



MOUNTING AND INSTALLING// FRIGOPACK FU+ RANGE (ALL VERSIONS): REMOVING THE CONTROL MODULE AND TERMINAL COVER

Preparations:

Do remove the graphic keypad or blank cover of the **FrigoPack** FU+ Refrigeration Inverter by pulling it out.
Release the center screw holding the blue control module cover (A) and remove cover by sliding down and taking it off.
After that release control module screw (C) and remove control module, too.

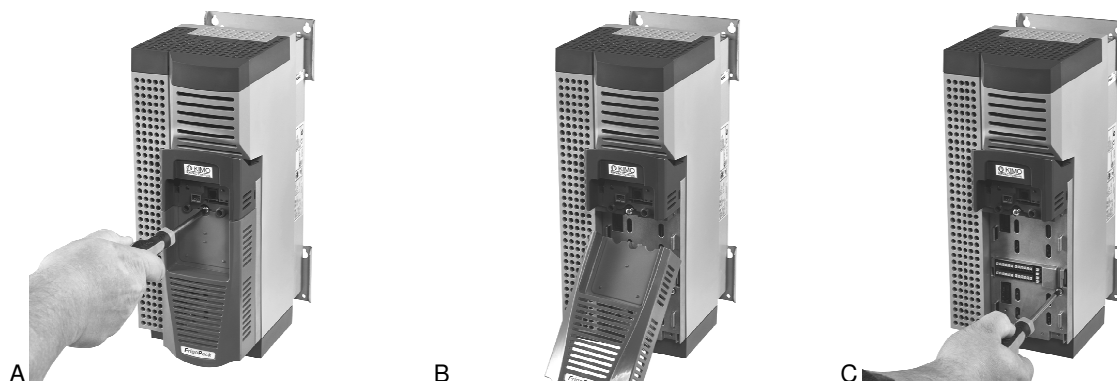

Removing the lower terminal cover:

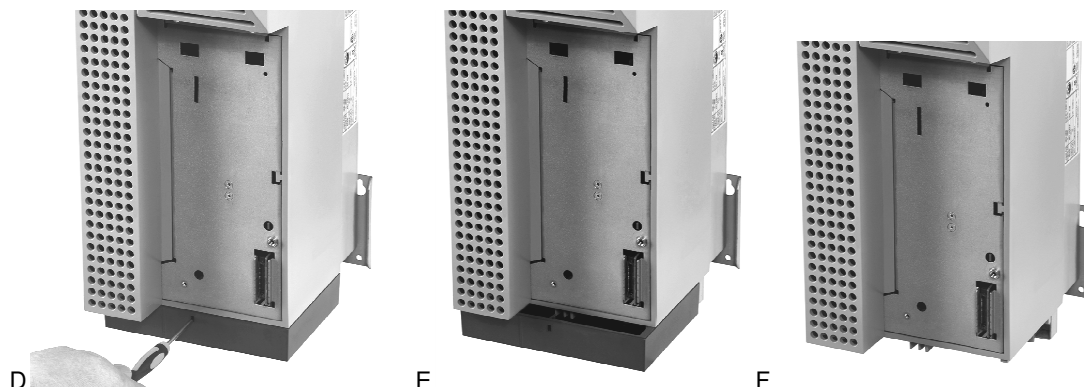

1. Insert a thin, long screwdriver (diameter ca. 2mm) about 15 mm deep into the opening on the lower terminal cover (D).
2. Slightly push screwdriver to the right in order to release a hatch inside the cover.
3. Pull the cover to the frontside and remove it (E & F).

Power terminals for supply and motor cables are accessible now:

