

OVERVIEW ON VALID SOFTWARE VERSIONS OF *FRIGOSOFT*

For *FrigoPack* FEP:

- FS 1.6: Basic refrigeration with up to 2 compressors
- FS 2.6: Standard refrigeration with up to 4 compressors
 "Floating" control of condensing temperature
 Also suitable for air cooling
- FS 3.6: Chillers for single and multiple circuits
 "Floating" control of condensing temperature
 Also suitable for cooling and dehumidification in ducted air systems
- FS 4.6 For use with external controllers with a 0 ... +10 V output

For *FrigoPackE* FEP:

- FS 1.6: Basic refrigeration with up to 2 compressors
- FS 4.6 For use with external controllers with a 0 ... +10 V output

For *FrigoPackE* FMV:

- FS E2N: Basic refrigeration with up to 2 compressors

For *FrigoPackEC* FMV:

- FS E4: For use with external controllers with a 0 ... +10 V output

For *CondensPack* FMV:

- FS EA: Speed control of refrigeration condenser fans

For all *FrigoPack* FU+ (FPE FU+, FP FU+, FPEC FU+):

- FS X.7: Universal refrigeration software for all standard applications; automatic adaption by integrated module detection. Depending on the module installed, the following functionality is activated (analog to FP FEP):

FS 1.7 (Module BM-1): Basic Pressure Control (max. 3 compressors as standard, max. 5 with additional relays; FPE FU+)

FS 4.7 (No module): External Control with 0...10V signal (FPEC FU+)