

OVERVIEW ON VALID SOFTWARE VERSIONS OF *FRIGOSOFT*

For *FriGoPack FEP*:

- FS 1.6: Basic refrigeration with up to 2 compressors
- FS 2.6: Standard refrigeration with up to 4 compressors
"Floating" control of condensing temperature
Also suitable for air cooling
- FS 3.6: Chillers for single and multiple circuits
"Floating" control of condensing temperature
Also suitable for cooling and dehumidification in ducted air systems
- FS 4.6 For use with external controllers with a 0 ... +10 V output

For *FriGoPackE FEP*:

- FS 1.6: Basic refrigeration with up to 2 compressors
- FS 4.6 For use with external controllers with a 0 ... +10 V output

For *FriGoPackE FMV*:

- FS E2N: Basic refrigeration with up to 2 compressors

For *FriGoPackEC FMV*:

- FS E4: For use with external controllers with a 0 ... +10 V output

For *CondensPack FMV*:

- FS EA: Speed control of refrigeration condenser fans

For all *FriGoPack FU+* (*FPE FU+*, *FPEC FU+*):

- FS X.7: Universal refrigeration software for all standard applications; automatic adaption by integrated module detection. Depending on the module installed, different functionalities are activated, e.g.:
 - FS 1.7 (with module BM-1): Basic Pressure Control (3 compressors as standard, more with additional relays; *FPE FU+*)
 - FS 4.7 (No module): External Control with 0...10V signal (*FPEC FU+*)