


CONNECTING FRIGOPACK FU+ INVERTERS: REMOVING CONTROL MODULE COVER & TERMINAL COVER

Removing the blue control module cover:

In order to get access to the **FrigoPack FU+** control terminals, **the graphic keypad has to be removed first of all.** Press it down slightly from the top edge and then pull out (A). Release the center screw fixing the blue control module cover (B) and remove cover by sliding down and taking it off (C). Now you can access the control terminals. Fig. D shows the control terminals of **FrigoPackEC FU+**.

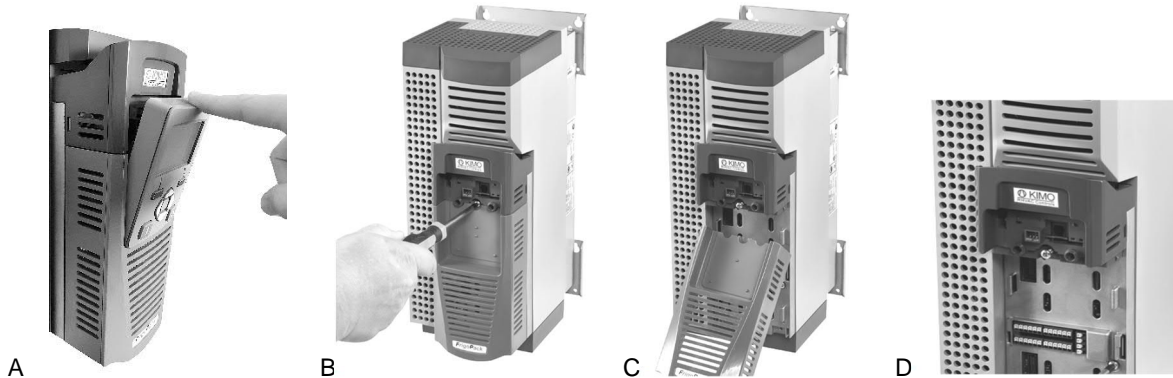

Removing the lower terminal cover (access to terminals for supply cables and motor cables):



1. Insert a thin, long screwdriver (diameter ca. 2mm) about 15 mm deep into the opening on the lower terminal cover (D).
2. Slightly push screwdriver to the right in order to release a hatch inside the cover.
3. Pull the cover to the frontside and remove it (E & F). Power terminals for supply and motor cables are accessible now:

