

FRIGOPACK FU+ RANGE (ALL VERSIONS): INSTALLATION OR EXCHANGE OF THE CONTROL MODULE

Preparations:

Please make sure that the frequency inverter is not connected to the supply before carrying out the following steps. Refer to the Safety Instruction Booklet supplied with FriGoPack FU+ for detailed information.

Description:

Please follow the instructions below to deinstall the control module and install a new control module in the frequency inverter:

Do remove the graphic keypad (or blank cover) of the FriGoPack FU+ Refrigeration inverter by slightly pressing it down and pulling it out (A).

Release the center screw holding the blue control module cover (B) and remove cover by sliding down and taking it off (C).



After that release control module screw (D) and remove the control module (E).

You may now install the replacement control module, fix the screw and carry out steps C to A in reverse order.

